



TIMETRAX™ Sync
7000/7000BDL110

Master Clock Controller

User Guide

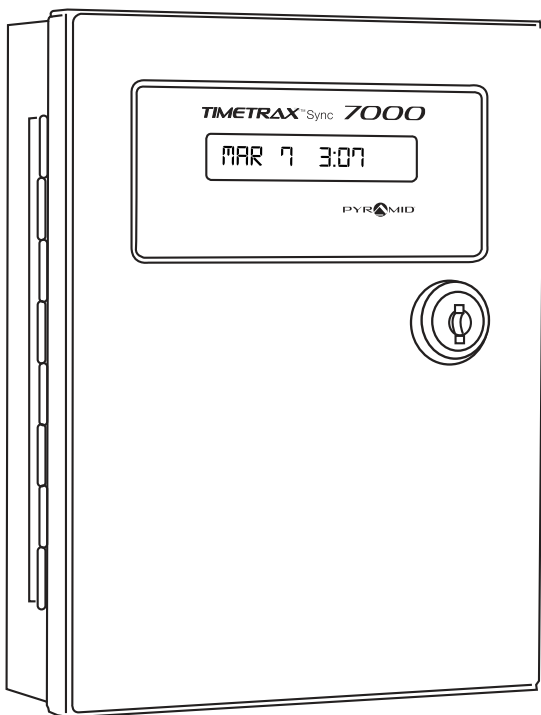


TABLE OF CONTENTS

TABLE OF CONTENTS 1

PRODUCT OVERVIEW 2

FEATURES..... 3

CONTENTS..... 4

WALL MOUNTING 5

INSTALLATION 6

PROGRAMMING 7-8

CLOCK CONNECTION 9-12

BELL CONNECTION 13-14

BELL SCHEDULE..... 15

SPECIFICATIONS 16-17

ACCESSORIES..... 18



WARRANTY & TECHNICAL SUPPORT 19

OVERVIEW

Thank you for choosing a TimeTrax Sync™ 7000/7000BDL110 Master Clock System. The TimeTrax Sync™ 7000/7000BDL110 synchronizes up to 200 TimeTrax Sync™ Analog Clocks (part #5200) and/or Digital Clocks (part# DIG4B, DIG6B) The system can provide power to eight TimeTrax Sync™ Analog Clocks (part #5200) using RJ45 connector. Digital Clocks need to have their own 100-240V AC 50/60Hz power supplied.

The TimeTrax Sync™ 7000 integrates with 24V DC bells or horns and is able to operate a bell/horn schedule up to 300 events per 24 hours.


The TimeTrax Sync™ 7000BDL110 includes a Relay SPDT contact for bells and horns. The contact rate is 10amps @ 125V AC or 7A @30V DC. Please refer to page 17 for a complete list of bell and horns.

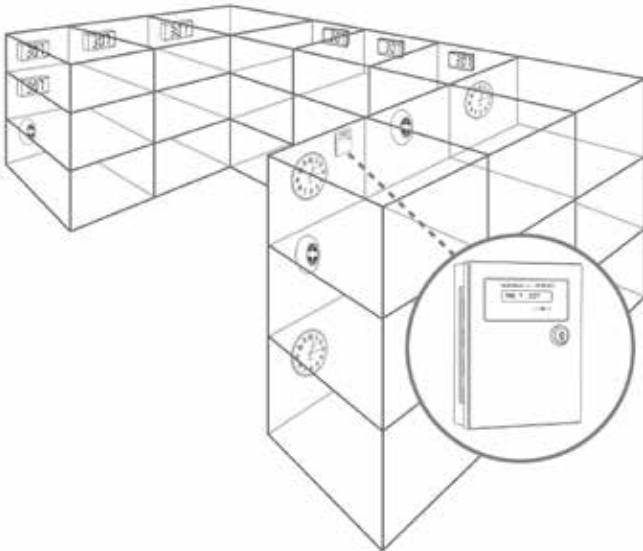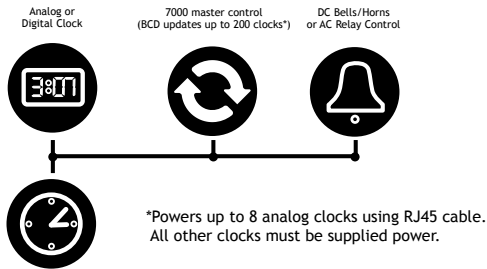


7000/7000BDL110 MASTER CLOCK CONTROLLER : FEATURES

| | 7000 | 7000BDL110 |
|----------------------------|--|---|
| Synchronization Capacity | 200 TimeTrax Sync™ Analog and/or Digital Clocks | 200 TimeTrax Sync™ Analog and/or Digital Clocks |
| Synchronization Distance | Up to 300 feet | Up to 300 feet |
| Analog Clock Power | Up to 8 Analog Clocks (part #5200) using RJ45 | Up to 8 Analog Clocks (part #5200) using RJ45 |
| Bell/Horn Interface | 24V DC Bells and Horns | 110V AC Bells and Horns |
| Bell Scheduling | Up to 300 Events | Up to 300 Events |
| Bell & Horn Power | Up to 35 bells (part #41361 & 41392) or 800 milliamps (mA) per event Up to 20 horns (part #41362) or 800 milliamps (mA) per event | Contact SPDT 10amps total @ 125V AC, 7A @ 250V AC or 7A @ 30V DC Bells #41397R & #41398G Horns #41363 |
| Display | Date & Time (AM/PM or Military) | Date & Time (AM/PM or Military) |
| Automatic Time Adjustment | Short months, Leap Year & Daylight Saving Time | Short months, Leap Year & Daylight Saving Time |
| Tamper-Proof Security Lock | Yes | Yes |
| Warranty | 1-Year manufacturer's limited warranty | 1-Year manufacturer's limited warranty |


CONTENTS

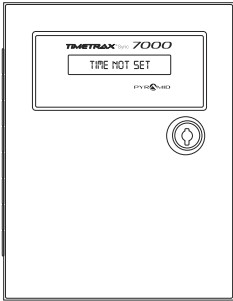


TimeTrax Sync™ 7000
Master Clock Controller

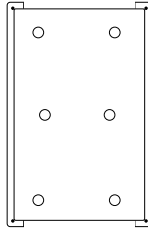

Relay
(7000BDL110 ONLY)


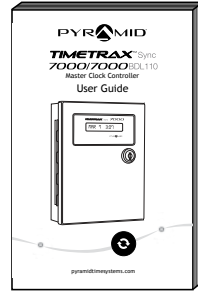


7000/7000BDL110
User Guide

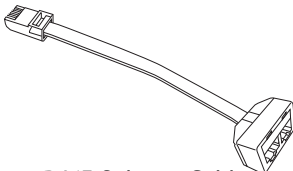

RJ45 Splitter Cable

 
Power Adapter

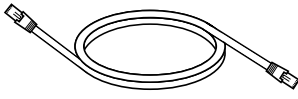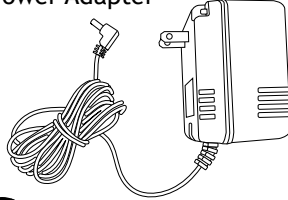

RJ45 50' Cable




Security
Keys (2)

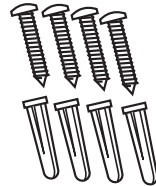

Mounting Screws (4)
Wall Anchors (4)

WALL MOUNTING

- ① Use key to unlock and open front cover.

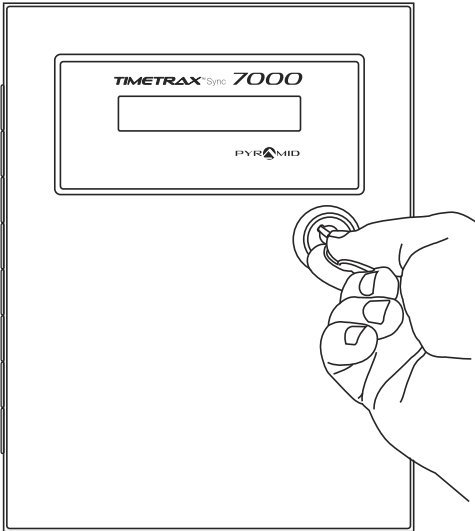


- ② Select a location for mounting. Power outlet should be within 5 feet of mounting location.

- ③ With door, open, hold the case in desired location and mark holes for drilling. Drill holes for mounting.


- ④ Install screws in wall, leaving approximately 3/16 inch of screws exposed. For sheet rock walls, use plastic anchors.

- ⑤ Hang TimeTrax Sync™ 7000 on wall, aligning keyholes on the rear with screw heads. Press downward on case until it lowers onto screws.

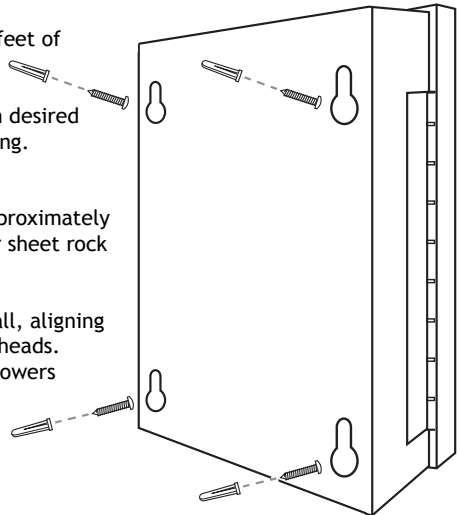

INSTALLATION / 7000

- 1 Route the power supply through cable channel located on right side or bottom of the 7000 case. Connect power supply into power port labeled POWER.
- 2 Plug power supply into standard electrical wall outlet.

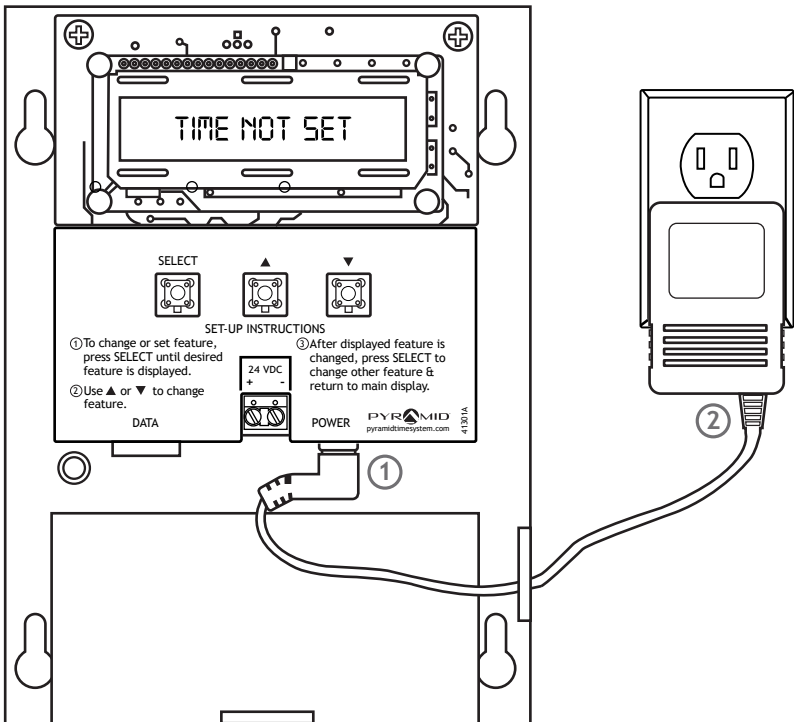

PROGRAMMING

The diagram illustrates the programming interface. At the top, three buttons are shown: a square button labeled 'SELECT', a square button with an upward-pointing triangle, and a square button with a downward-pointing triangle. Below these buttons is the text 'SET-UP INSTRUCTIONS'. To the left of the instructions are the labels 'DATA' and 'POWER'. In the center, a display shows '24 VDC' with a '+' sign on the left and a '-' sign on the right. Below the display is a small icon of a power source. To the right of the display is the text 'PYRAMID pyramidtimesystem.com' and the number '41301A'.

SELECT

▲ ▼

SET-UP INSTRUCTIONS

① To change or set feature, press SELECT until desired feature is displayed.

② Use ▲ or ▼ to change feature.

③ After displayed feature is changed, press SELECT to change other feature & return to main display.

DATA

24 VDC
+ -

POWER PYRAMID pyramidtimesystem.com 41301A


- ① Locate programming buttons labeled SELECT, (▲) (UP) & (▼) (DOWN).
- ② Press SELECT until desired feature is displayed (see chart on next page).
- ③ Press (▲) (UP) or (▼) (DOWN) to scroll through feature options.
- ④ Press SELECT to save option setting and move onto next feature.

7000 MASTER CLOCK CONTROLLER : PROGRAMMING

| FEATURE (SELECT) | DISPLAY | DEFAULT SETTING | OPTIONS (SCROLL ▲▼) |
|-------------------------------------|------------------|-----------------|--|
| Schedule Bells | SET EVENT * NO | NO | NO: No event(s) scheduled. YES: Schedule event(s) SET EVENT #1-300 See instruction on p.15. |
| Date Format | DATE FMT = USA | USA | Use the UP or DOWN key to select USA or EURO (European) display format for time. |
| Set Year | SET YEAR = 2001 | 2001 | Use the UP or DOWN key to set the current year. |
| Set Month | SET MONTH = JAN | JAN | Use the UP or DOWN key to set the current month. |
| Set Day | SET DAY = 1 | 1 | Use the UP or DOWN key to set the current day of month. |
| Set Daylight Saving Time (DST) Rule | DAYL'T SAV = USA | USA | USA: USA DST: Begins 2nd SUN of MAR, Ends 1st SUN of NOV EURO: European DST: Begins Last SUN of MAR, Ends Last Sun of OCT OTHER: Set a custom DST Rule Choose from LINE or CRYSTAL time base. OFF: No adjustment for DST. |
| Set Format | DSPLY FMT = | AM/PM | AM/PM: 12 Hour MIL: Military, 24 Hour |
| Set Hour | SET HOUR = 12PM | 12AM | Use the UP or DOWN key to set the current hour of day. |
| Set Minutes | SET MINUTES = 00 | 00 | Use the UP or DOWN key to set the current minute. |


CLOCK CONNECTION

- 1 Using RJ45 BCD Cable, connect one end of the cable to the 7000 port labeled DATA and route cable through cable channel located on the right side or bottom of 7000 case.
- 2 Connect the other end of the RJ45 cable to port located on back of Analog or Digital clock.
- 3 Mount and install wall clocks according to instructions included with clock.

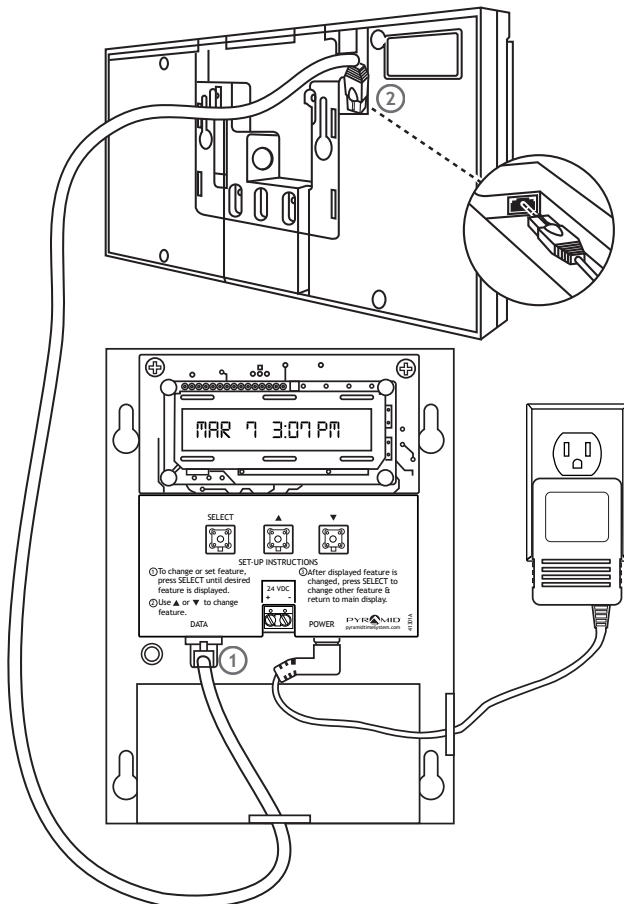


CLOCK CONNECTION

- 1 Use RJ45 Splitter Cable (part # 41270) to add more clocks. Up to 200 clocks may be added to the system, however clocks should be located within 300 feet of 7000 unit to receive the synchronization time data (BCD signal).

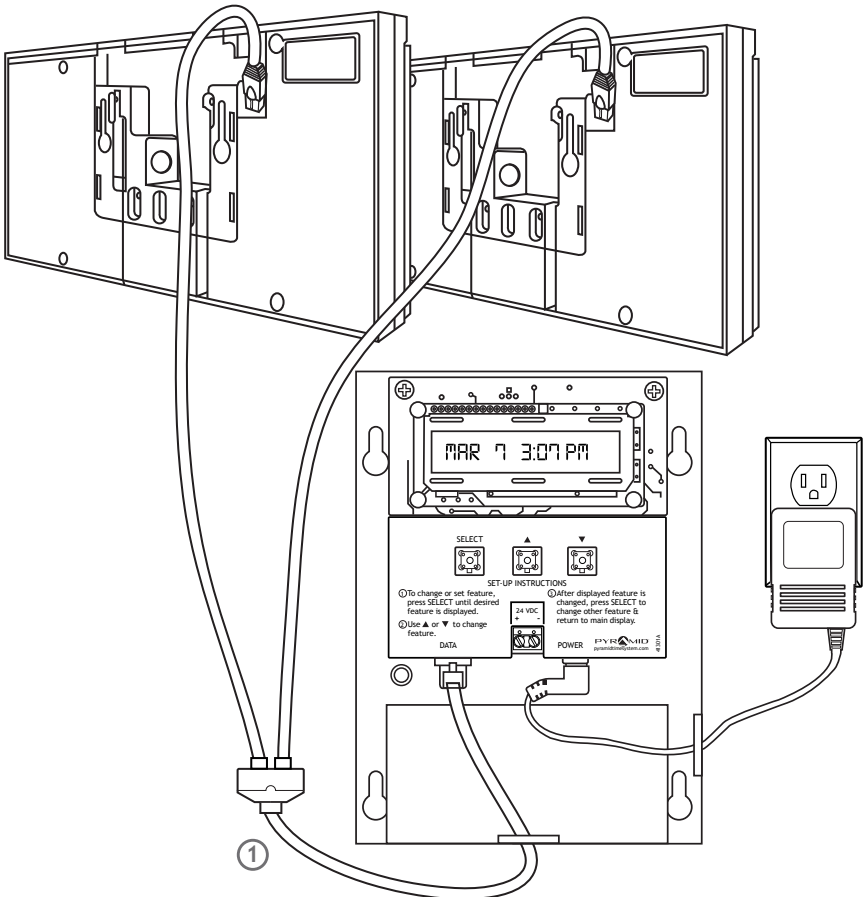


CLOCK CONNECTION (BCD)

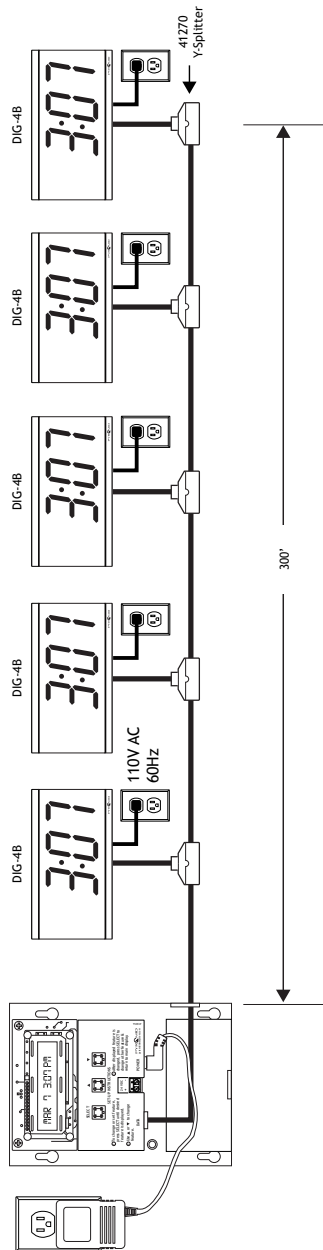

CLOCK CONNECTION (BCD & POWER)


7000 Master Clock powers up to 8 clocks using RJ45 cable. For more than 8 clocks, use 5300 (up to 8 clocks) or power up clocks individually from 110V AC 60Hz sources using a licensed electrician.

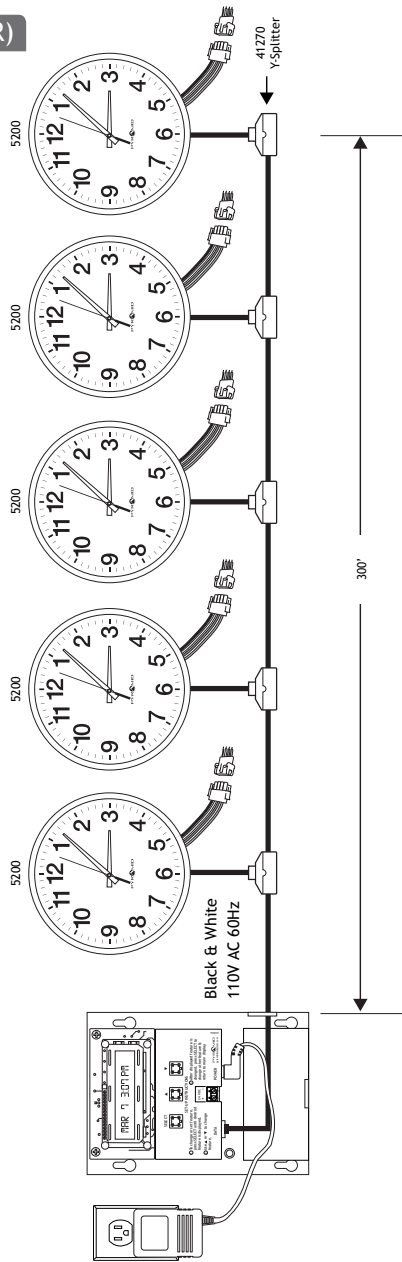

BELL CONNECTION & SCHEDULE

110V AC BELL CONNECTION WITH 7000BDL110


CAUTION: 110V MUST BE INSTALLED BY A LICENSED ELECTRICIAN. Please refer to diagram.

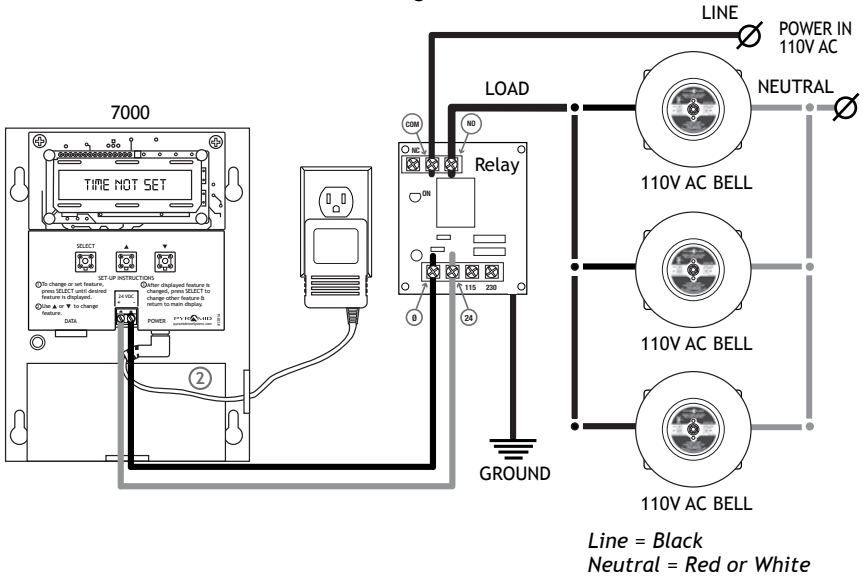

24V DC BELL CONNECTION

The 7000 will provide power to 24V DC bells and/or horns, up to 800 milliamps (mA) per event.

- ① Wire 24V DC Bells and/or Horns to the 7000 terminal labeled 24 VDC using 16-20 gauge wire (sold separately)
- ② Route the bell wire through the cable channel located on right side or bottom of 7000 case. A total of 35 bells (part #41361, 41392) or 20 Horns (part #41362) can be connected to the circuit.
- ③ Use the following table to set a bell/horn schedule. Program up to 300 bell/horn events per 24 hours.

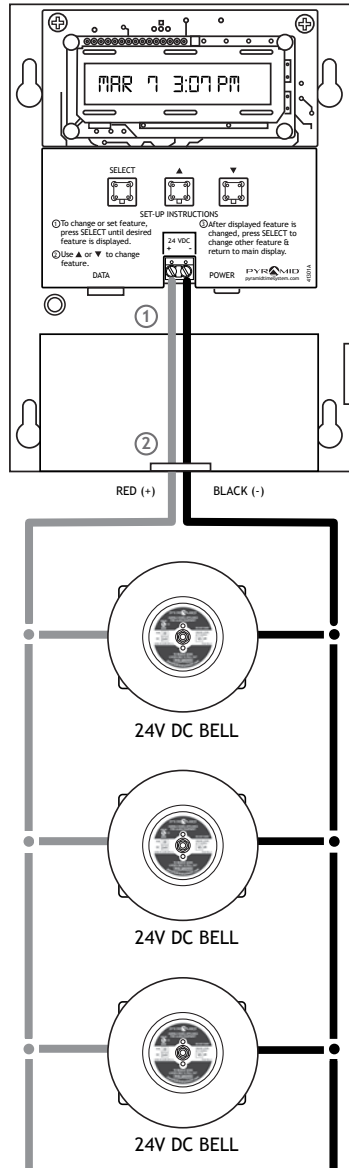

SET EVENT

MENU : SET EVENT ▲▼

SCHEDULE AN EVENT (e.g. Sound Bells/Horns)

| FEATURE (SELECT) | DISPLAY | DEFAULT SETTING | OPTIONS (SCROLL ▲▼) |
|-----------------------------------|---------------|---------------------------|---|
| Set Event Schedule | SET EVENT * | NO | Scroll ▲(UP) or ▼(DOWN) to schedule event |
| Assign the Event a Number (1-300) | SET EVENT * I | 1 | SET EVENT (e.g.1, 2, 3 ... 300) |
| Set the Event's Duration | EVENT * | OFF | OFF, .5 SEC, 1-15 SEC (determines length of time buzzer/bell/horn sounds) |
| Set the Event's Hour | EVENT * HR = | 12 AM (AM/PM) 00 (MIL) | EVENT HOUR +/- One Hour 12 HR: 12AM-11PM 24 HR: 00-23 |
| Set the Event's Minute | EVENT * MIN = | 00 | EVENT MINUTE +/- One Minute (e.g. 00, 17, 59) |
| Set the Event's Day | EVENT * DAY = | ALL | Monday thru Friday Event: M-F One day event: SUN, MON, TUE, WED, THU, FRI, SAT All week event, SUN-SAT: ALL |

SPECIFICATIONS

7000 SPECIFICATIONS



| | |
|------------------|---|
| Part# | 7000/7000BDL110 |
| Time Set | Manual |
| Power Output | 1. 24V DC 800mA (bells, horns, relay) 2. 24V DC using RJ45 (powers up to 8 analog clocks, #5200, #5217N) |
| Power | Power Adaptor 120V AC/18V AC, 1000mA |
| BCD Time Updates | Up to 200 clocks, using RJ45 |
| Operating Temp | -30° F (-34.44° C) to 130° F (54.44° C) |
| Display | LCD, date & time |
| Housing | Textured powder coat surface metal |
| Color | Black |
| Mounting | Wall Mount |
| Warranty | 1-Year manufacturer's limited warranty |
| Dimensions | 5.5"W x 7.125"H x 1.75"D (13.9cm x 18.1cm x 4.4cm) |
| Weight | 1.81lbs (.81kg) |
| Shipping Weight | 4.451lbs (2.01kg) |

BELL RELAY SPECIFICATIONS*

| | |
|-----------------|---|
| Contact Rating | 10A @ 125V AC, 7A @ 250V AC (SPDT) |
| Color | Putty |
| Mounting | Wall Mount |
| Dimensions | 3.125"W x 5.25"H x 2.625"D (7.93cm x 13.33cm x 6.66cm) |
| Weight | .75lbs (.34gr) |
| Shipping Weight | 1lb (.045gr) |

*Included with 7000BDL110.

SPECIFICATIONS

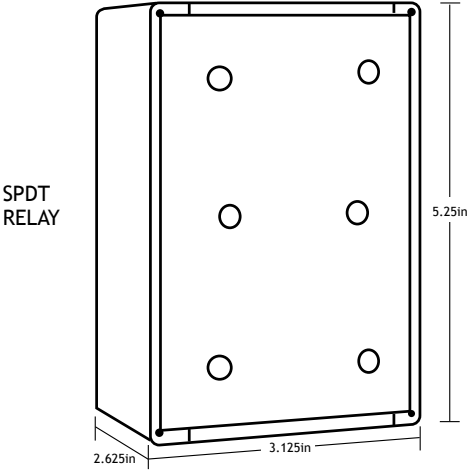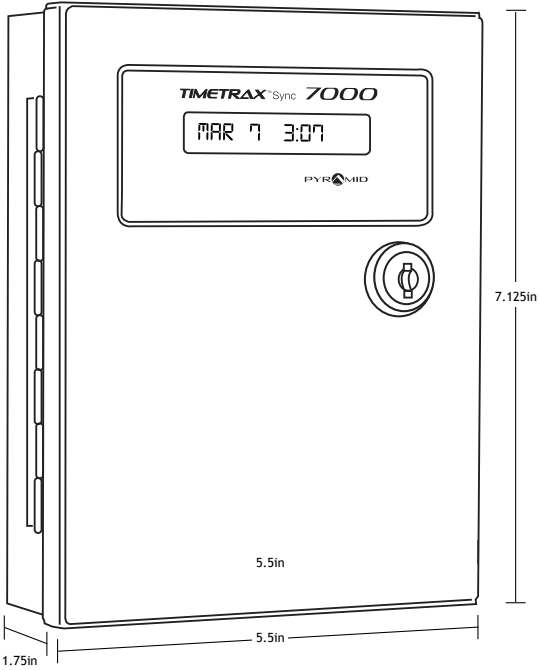

| ACCESSORIES | |
|-------------|---|
| PART # | DESCRIPTION |
| DIG-4B | 4" x 4-digit Red LED Independent Digital Clock |
| DIG-6B | 4" x 6-digit Red LED Independent Digital Clock |
| 41357G | 4" x 4-digit Red LED Digital Clock |
| 61357G | 4" x 6-digit Red LED Digital Clock |
| 5200 | 13" Analog Clock 12 Hour Face |
| 5217N | 17" Analog Clock 12 Hour Face |
| 5300* | Single Bell Ringer |
| 41200 | Power Adaptor 120V AC/18V AC |
| 41269 | RJ45 BCD Cable, 50' |
| 41314 | RJ45 BCD Cable, 100' |
| 41270 | RJ45 Y-Splitter Cable |
| 41361 | 6" 24V DC Bell |
| 41392 | 8" 24V DC Bell |
| 41362 | 24V DC Horn |
| 41363 | 110V AC Horn (7000BDL110 ONLY) |
| 41397R | 6" 110V AC Bell, red (7000BDL110 ONLY) |
| 41398G | 8" 110V AC Bell, grey (7000BDL110 ONLY) |
| 41449 | Bell Wire, 100' Spool (2 Conductor 20 AWG 80°C, 300V) |
| 41450 | Bell Wire, 250' Spool (2 Conductor 18 AWG 80°C, 300V) |

*Powers up to eight 5200 or 5217N Analog Clocks using RJ45.

WARRANTY

1-YEAR LIMITED WARRANTY

Pyramid warrants its Synchronized Clock Systems to the original user against defective material or workmanship for a period of 1 year from date of purchase.

The manufacturer's responsibility under this Warranty is limited to repair or replacement of defective part or parts. Pyramid reserves the right to determine whether parts failed because of defective material, workmanship, or other causes. Failure caused by accident, alteration, misuse or improper packaging of returned unit is not covered by this Warranty. Any repair to equipment other than by Pyramid voids the Warranty. Users in territories other than USA, Canada, South America & Australia should contact the Dealer from whom the unit was purchased. The rights under this Warranty are limited to original user and may not be transferred to subsequent users.

If Customer Support cannot troubleshoot your problem over the phone, we will replace your unit free of charge if it is within warranty period. Please contact Customer Support at **888.479.7264** between the hours of **8am-5pm EST** for details.

TECHNICAL SUPPORT

Should you need to speak live to one of our representatives, please call toll-free (US/Canada) at **888.479.7264** during regular business hours: **8am-5pm EST, M-F**.

SIMPLE : SMART[®]



CONTACT US:

For more information, visit pyramidthimesystems.com or call our technical support team at **888.479.7264** during regular business hours: **8am-5pm EST, Monday-Friday.**

Copyright © 2018 Pyramid Time Systems, LLC. All rights reserved.